

## Electronic Lock Instructions

Batteries are included with the safes package.

We do not install batteries into battery housing in order to prevent corrosion.

You need to open the safes by supplying battery power from an outside source or the override key.

See the instructions regarding an outside battery supplying kit or an override key. Install four AA size batteries into the battery case located at the back side of the door before use.

### Opening:

Press # and input your password

(factory set 168 for the first code, 88888888 for the second code)

If your password is less than 8 digits, press # to confirm your password.

For example press # and 1,6,8 and again press #

Display will show "OPEN" and then turn handle clockwise.

Some models are installed with security key instead of handle.

Then insert key within 5 seconds and turn key clockwise.

If you want your password not to be seen on LCD display, press \* after press #, and then put in your password. The display will show only small squares.

If you input the wrong numbers while entering your password, press \* to delete one number, or press \* and hold it for two second to delete all of the numbers.

### Closing:

Turn the handle (or key) counter-clockwise.

### Changing the first code:

Press "reset" button (located at the back of the safe door)

Put in your new password (3~8 digits)

Press # to confirm your password.

Display will show "In" and code has been changed.

### Changing the second code:

Press #

Press '0' twice

Press "reset" button (located at the back of the safe door)

Put in your new password (3~8 digits). The second code must be different from the first user code.

Press # to confirm your password.

Display will show "In" and code has been changed.